

 
Status Pages

This section explains the procedure for printing the status pages. The status page is a list of parameters and settings for most basic printer configurations. You may be required to produce a status page when requesting service to the printer.


Printing a Status Page

You can check the printer's current status, including available memory space and option settings by printing a status page.

- 1 Press **[Menu]**.
- 2 Press **▲** or **▼** repeatedly until `Print Status Page` appears.
- 3 Press **[OK]**. A question mark (?) appears.
- 4 Press **[OK]** again. The message `Processing` appears and the printer prints a status page.



```
Print
Status Page
```

 

```
Print
Status Page ?
```

For a sample status page and its full description, refer to *Understanding the Status Page* on page 2-16.