

## Status Pages

This section explains the procedure for printing the status pages. The status page is a list of parameters and settings for most basic printer configurations. You may be required to produce a status page when requesting service to the printer.

### Printing a Status Page

You can check the printer's current status, including available memory space and option settings by printing a status page.

- 1 Press **[MENU]**.
- 2 Press  $\Delta$  or  $\nabla$  repeatedly until `Print Status Page` appears.

```
Print
Status Page
```

- 3 Press **[ENTER]**. A question mark (?) appears.

```
Print
Status Page ?
```

- 4 Press **[ENTER]** again. The message `Processing` appears and the printer prints a status page.

For a sample status page and its full description, see *Understanding the Status Page* on page 2-16.